


FIG.1A

(1)pPTM+Sp

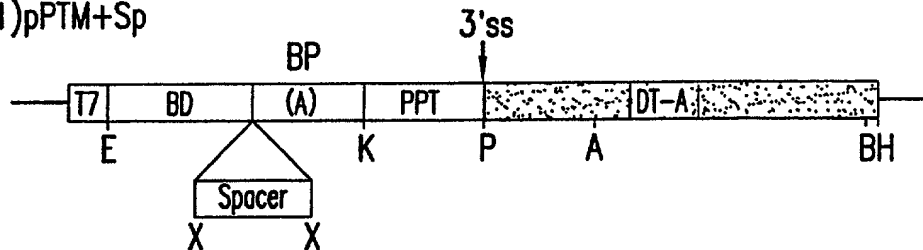

(2)pPTM+Sp

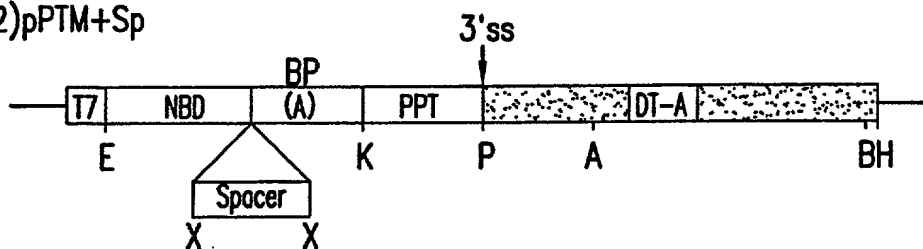


FIG.1B

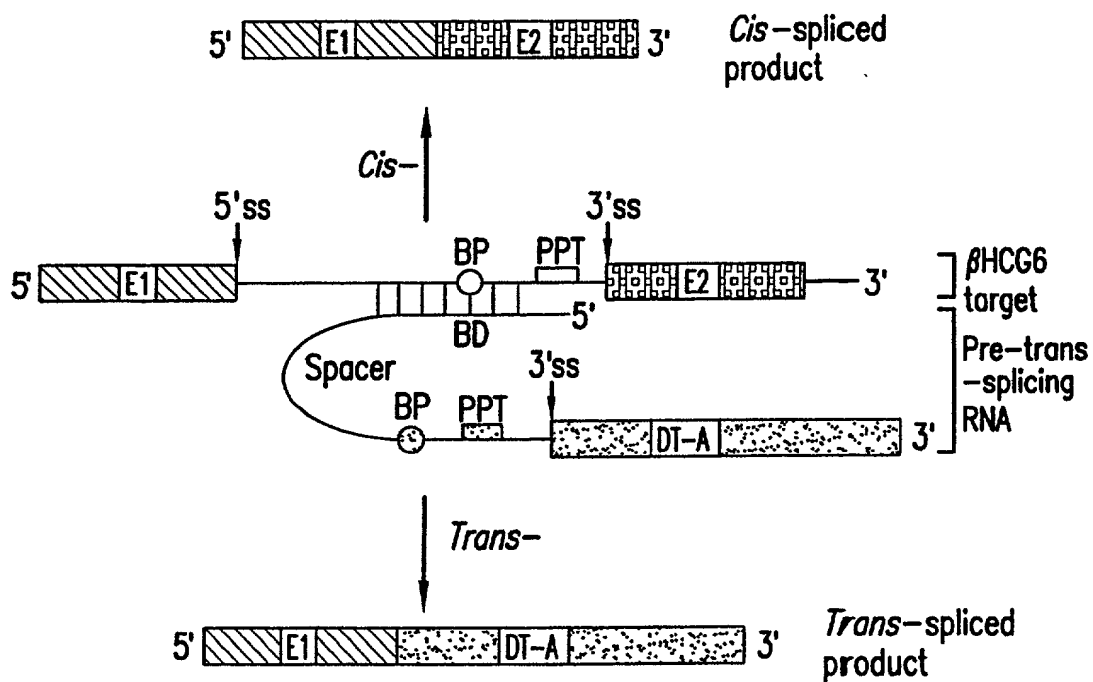


FIG.1C


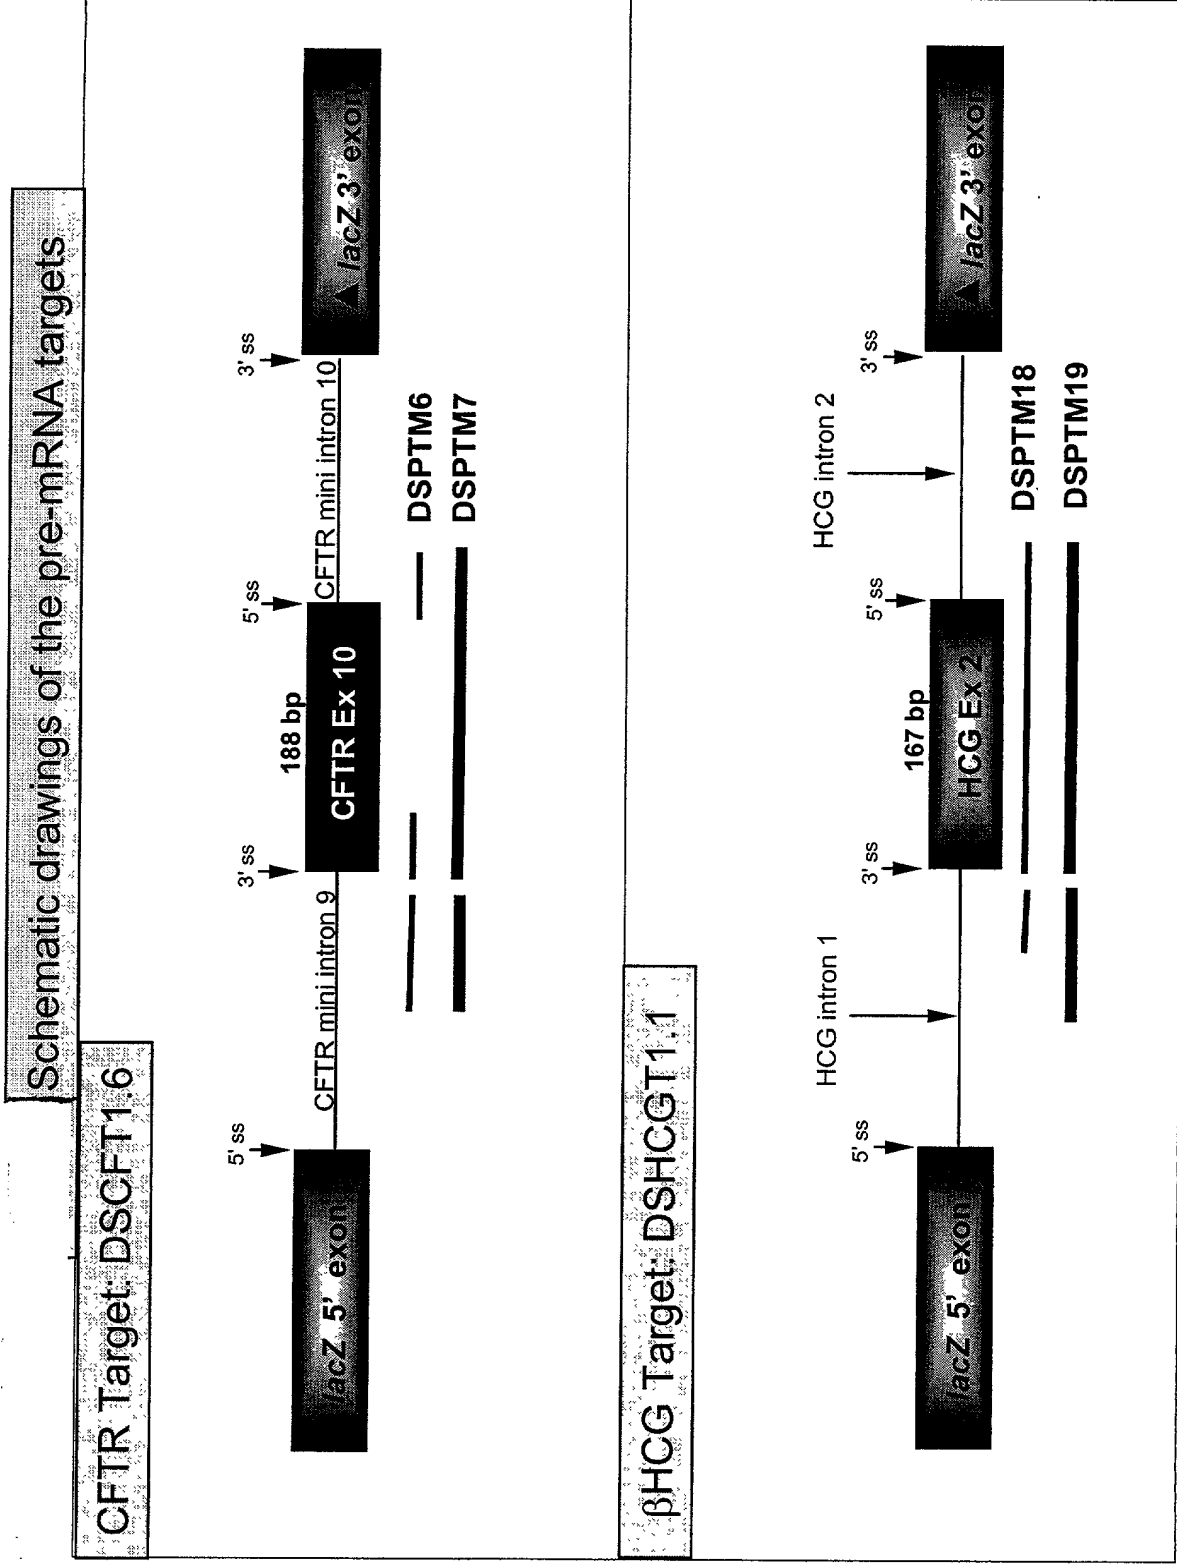


Figure 2

# Schematic diagrams of double *trans*-splicing PTMs

## DSPTM6 & 7 (CFTR Targeted)

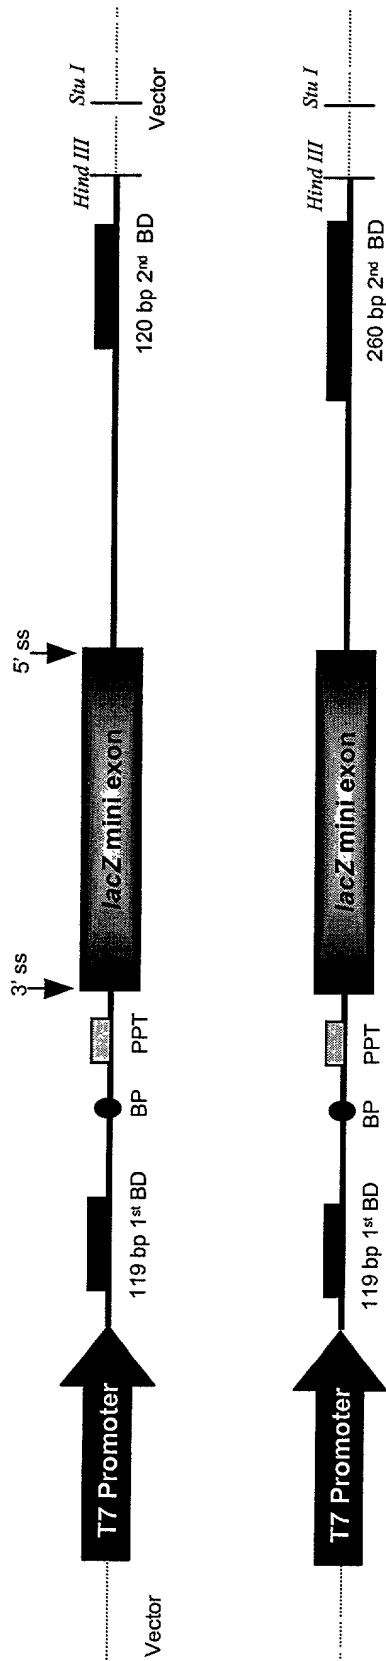

## DSPTM18 & 19 (βHCG Targeted)


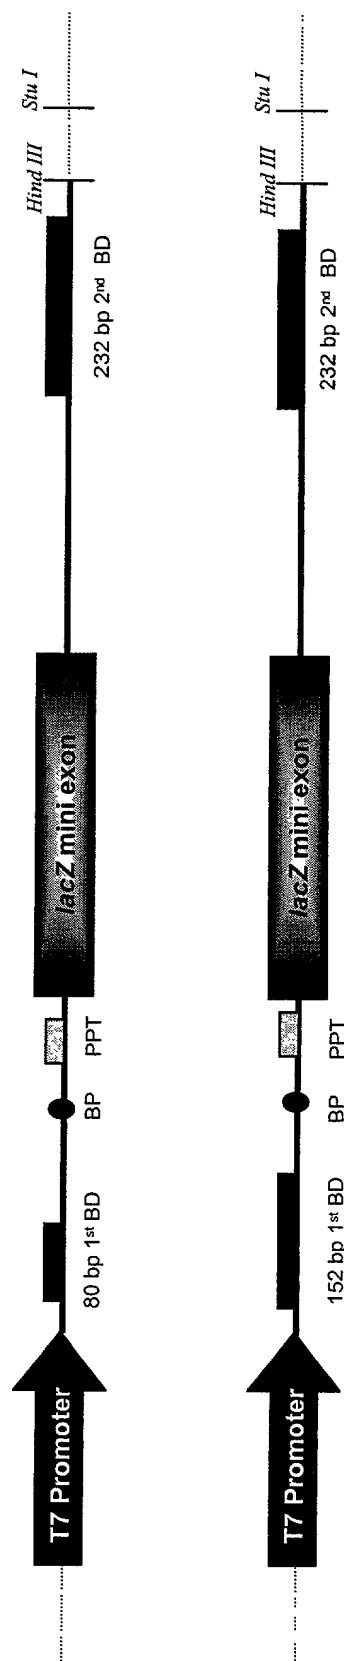


Figure 3

Diagram and important structural elements of double trans-splicing PTM7

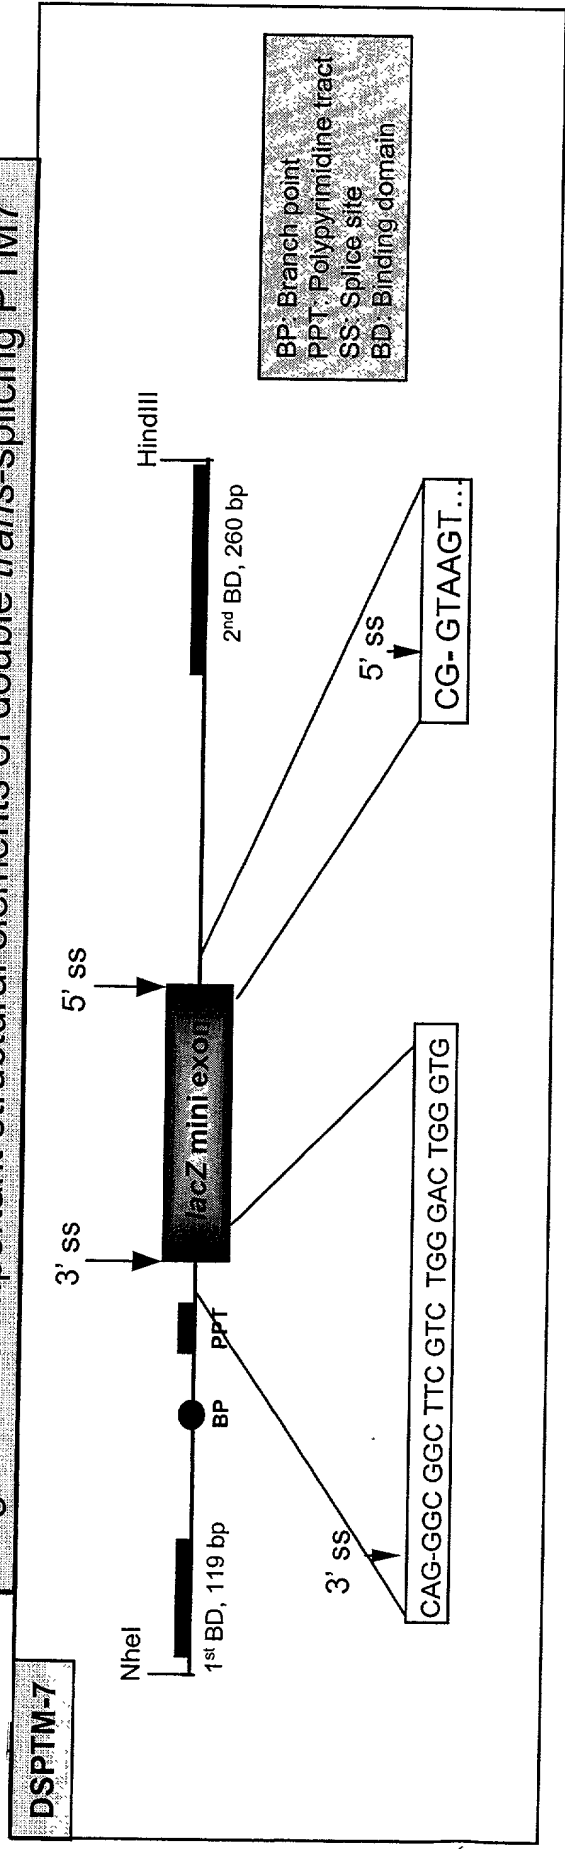

**1<sup>st</sup> BD (119 bp) :** GATTCAC TTGCTCC AATTATCATCCTAAGCAGAGTGATATTCTTATTGTAAAGATTCTATTAACTCATTTGATTCAAAATA  
TTTAAATACTTCCTGTTTCATACTCTGCTATGCAC

**Spacer sequences:** AACATTATTATAACGTTGCTCGAA


**BP, PPT and acceptor splice site:** TACTAAC T GGTACC TCTTCTTTTTTTTTT GATATC CTGCAG GGC GGC TTC GTC TGG GAC TGG

**5' donor site and 2<sup>nd</sup> spacer sequence:** IGA ACG GTAAGT GTTATCACCGATATGTGTCTAACCTGATTCCGGCCTTCGATACGCTAA  
GATCCACCCGG

**2<sup>nd</sup> BD (260 bp):** TCAAAAAGTTTTCACATAATTTCTTACCTCTTCTTGAAATTCATGCGCTTCTGTATCTATATTCATTCATTGGAA  
ACACCAATGATTTTCTTTAATGTGCGCTGGCATAATCCTGGAAAACCTGATAACACACAATGAAATTCCTCCACTGTGCTTAA  
AAAAACCCCTCTGAAATTCCTCCATTTCTCCATAATCATCATTAACAACCTGAACCTCTGGAATAAAACCCCATCATATTAACTCA  
TTATCAAATCAGCG

Figure 4


Figure 5

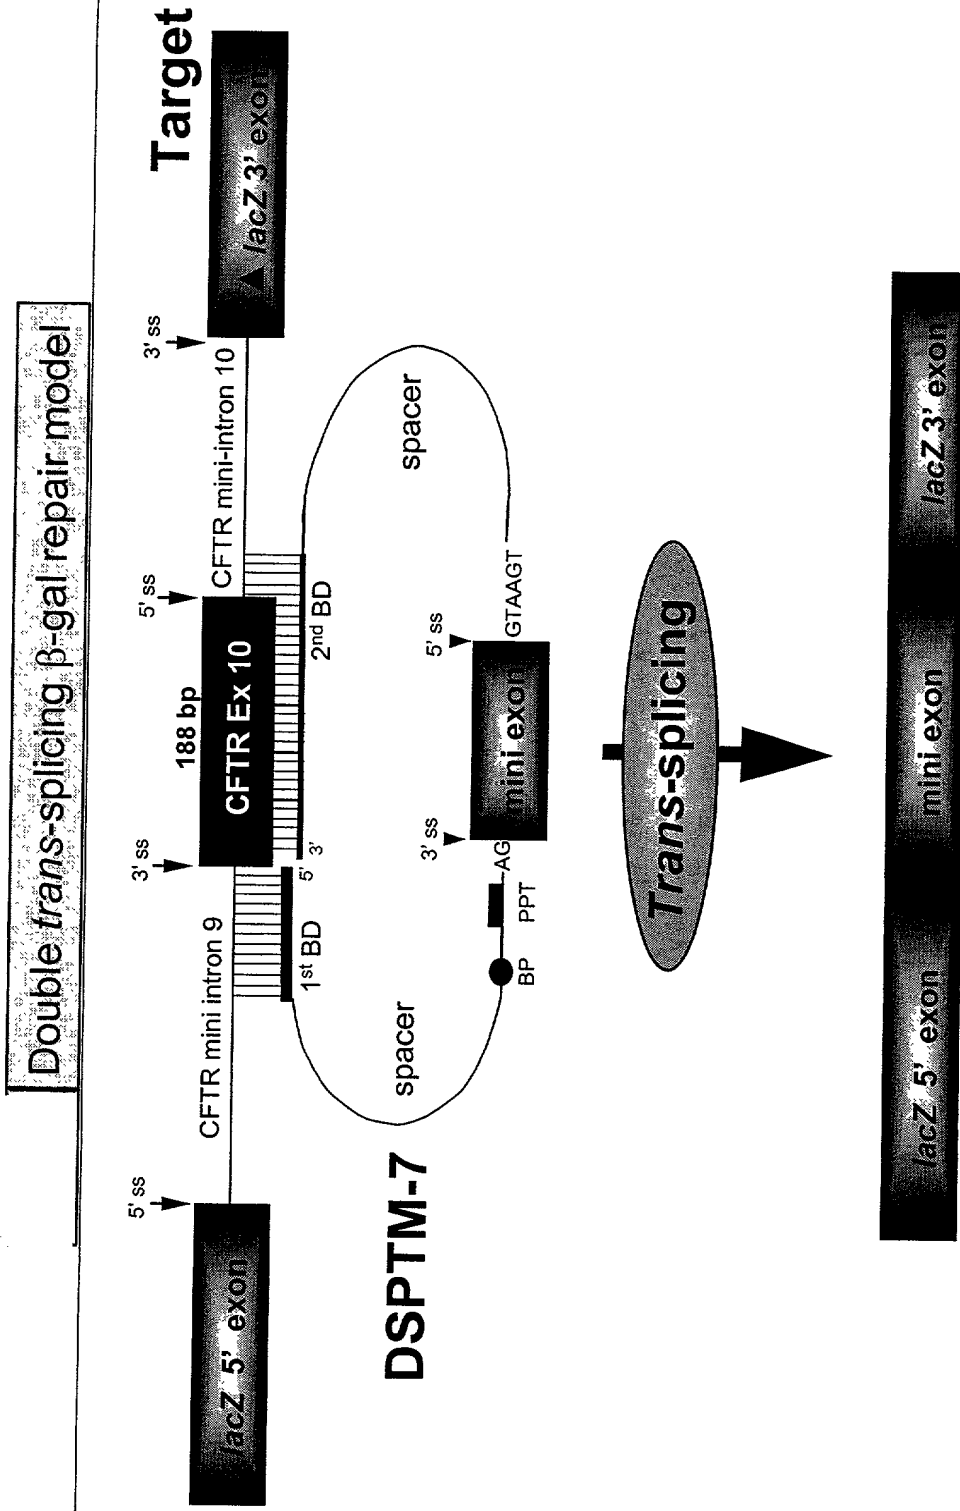


Accurate double *trans*-splicing between the target pre-mRNA and synthetic PTM RNA will result in the production of repaired *lacZ* mRNA

Proof-of-principle of SMaRT using synthetic double splicing PTM RNA in 293T cells

2nd PCR Amplification

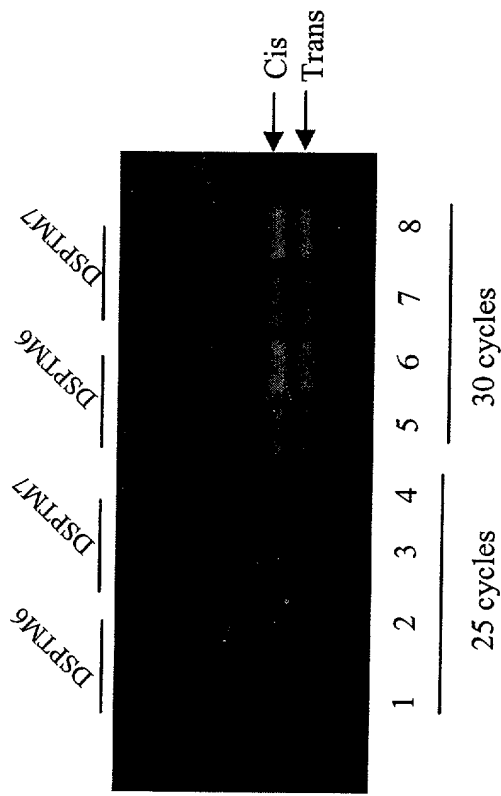

Diagnostic Test

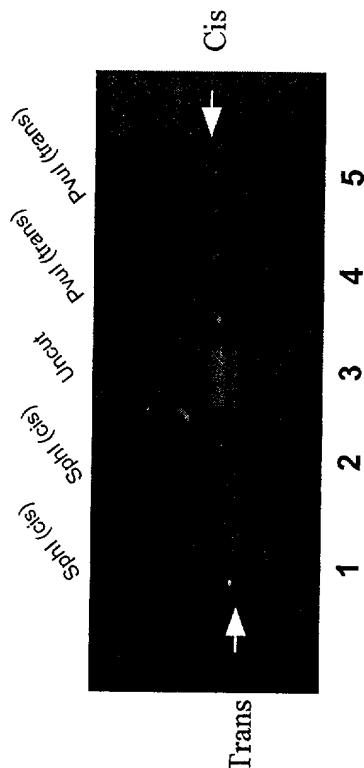

DSPTM6 and 7 (CFTR targeted)

Methods

Transfect 293T cells with DSPTM6 and DSPTM7 *in vitro* transcribed, gel purified RNA (2.5-5.0 µg)

Isolate total RNA, cDNA synthesis (Lac6R), PCR amplification (20 cycles, K1-1F + Lac6R), digest with *Sph* I + *Dde* I (*cis*-specific) at 37°C/ON

Purify double *trans*-spliced product using Biotin-Lac21R probe

PCR amplify the captured *trans*-spliced product (K1-2F+Lac6R). Expected products: *cis*- 260bp; *trans*- 220 bp.


Diagnostic test: Digest PCR product with *Pvu* I (*trans*-specific) and with *Sph* I (*cis*-specific) at 37°C for 2-3 hr

Sequence to confirm the accuracy of double *trans*-splicing

Figure 6A

Proof-of-principle of SMaRT using synthetic double splicing PTM RNA in stable cells

2nd PCR Amplification

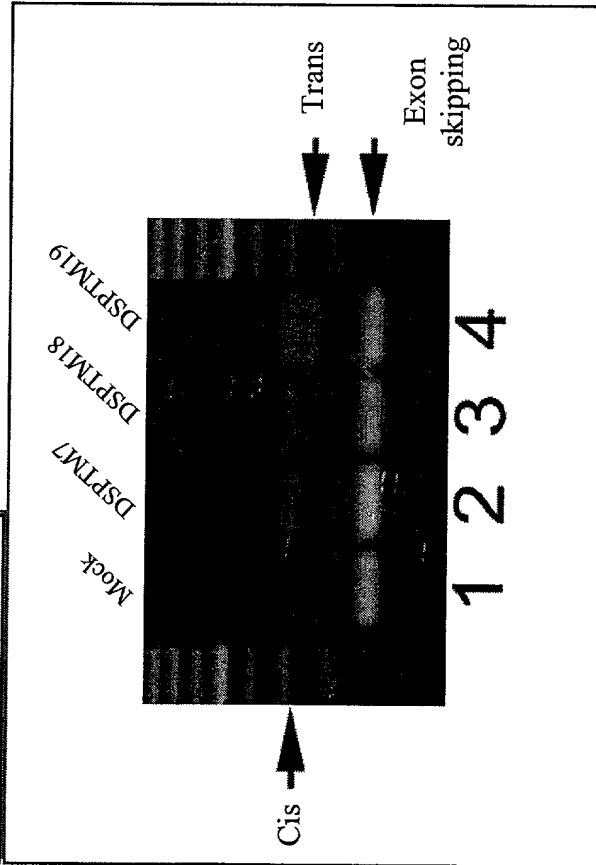

DSPTM18 and 19 (HCG targeted)

Methods

Transfect DSHCGT1.1 stable cells with DSPTM7, DSPTM18 and DSPTM19 *in vitro* transcribed, gel purified RNA (2.5-5.0 µg)

Isolate total RNA, cDNA synthesis (Lac6R), PCR amplification (20 cycles, KI-1F + Lac6R), digest with *Sph* I + *Dde* I (*cis*-specific) at 37°C/ON

Purify double *trans*-spliced product using Biotin-Lac21R probe

PCR amplify the captured *trans*-spliced product (KI-2F + Lac6R). Expected products: *cis*- 260bp; *trans*- 220 bp

Sequence to confirm the accuracy of double *trans*-splicing

Figure 6B



Accuracy of double *trans*-splicing of synthetic PTM RNA in 293T cells

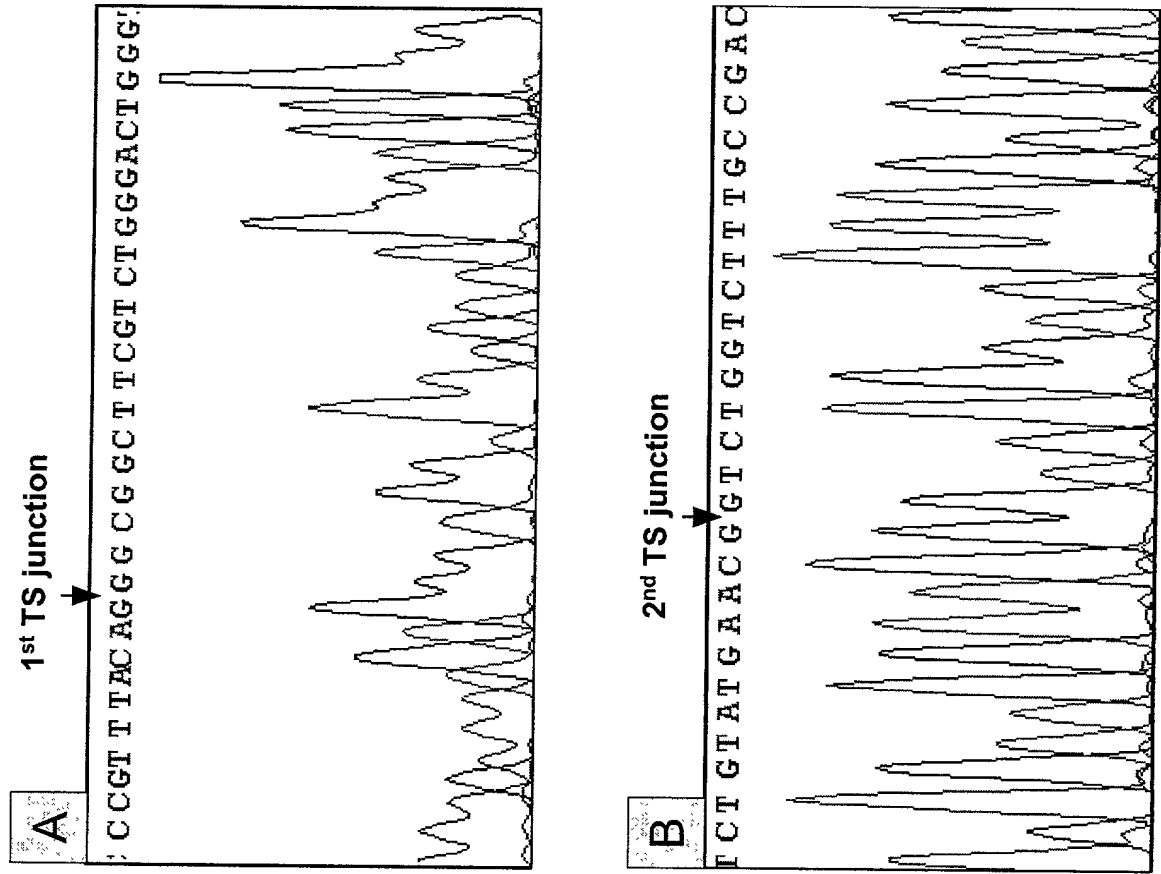


Figure 6C

Restoration of  $\beta$ -gal function through RNA transfection in 293T cells  
(Proof-of-concept for SMART RNA Therapeutics!!)  
Synthetic RNA, Double trans-splicing

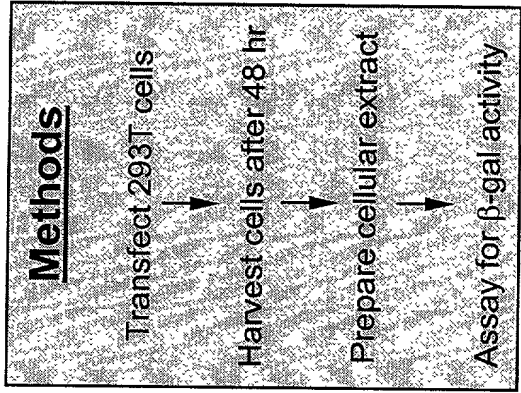
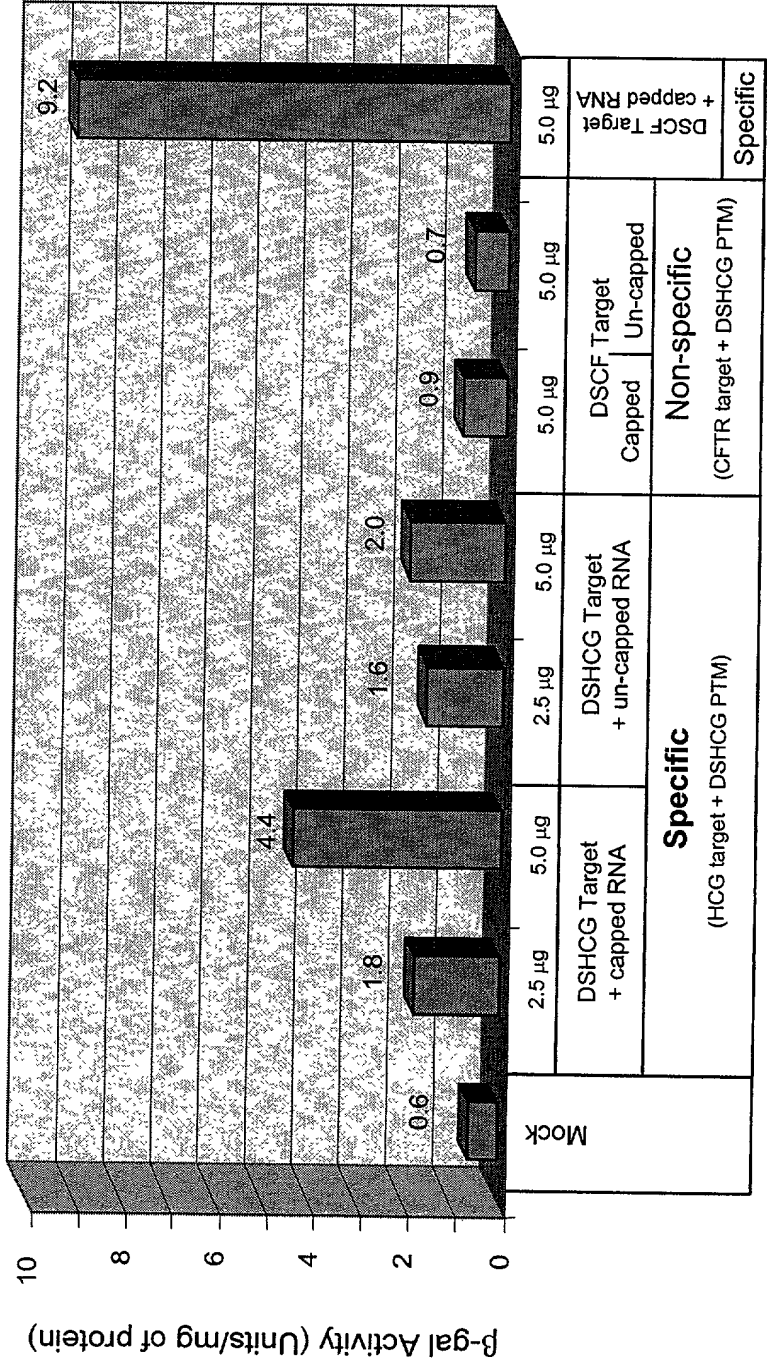


Figure 7